



FAULTY (DRUMMOND) MARTINDALE MTL20B TEST LAMP

OVERVIEW

We have been made aware that some (Drummond) Martindale MTL20B test lamps have developed a fault which prevents the lamps indicating correctly when testing between phases or at 120volts.

Two failure modes have been identified

- 1) The lamps indicating 400V do not operate
- 2) The lamps indicating 120V do not operate

WHAT YOU NEED TO DO

- All test lamps must be proven to work on a proving unit or known live supply
 - before being used
 - and after use to ensure correct operation
- Defective test lamps are :
 - Not to be used
 - Reported to AIRLine
 - Returned to logistics

DETAIL

The image below shows a faulty test lamp not showing the 400V is present.



It is the responsibility of line management to ensure all appropriate employees are issued with this document and to check their understanding of its content. This document will be subject to compliance audits within 14 days from the date of issue.